

TECHNICAL INFORMATION

PreTone VARIOUS COLOURS



Waterborne pigment stain for wooden floors. Colour intensification under colour oils. By accentuating the wood structure and grain, vibrant colour effects can be achieved.

- For significantly bolder colours
- Reduced oil-specific yellowing
- Simple and safe application
- Solvent-free
- Virtually limitless colour combinations are possible
- Odour neutral

Range of use:


On raw, carefully sanded wood. More intensive colour effects are achieved through the combination of water and pigment, especially with light colour effects. Many colour effects can be created in combination with LOBASOL® HS 2K ImpactOilColor or LOBADUR® HS 2K IntensiveColor^{A.T.}. These possibilities of individual colour designs allows you to create nearly unlimited customized solutions.



Technical Data

Art.-no.

10612



All colours are also available in 100 ml sample cans.

Solids	2.1 ±2%
pH	8.4
Contents	water, nonionic surfactants, pigments, dyes, preservatives
Storage and transportation	12 months of storage stability. Store and transport between +5 to +25°C. Protect from frost. No hazardous material according to ADR.
GISCODE	W2+




TECHNICAL INFORMATION

PreTone

VARIOUS COLOURS



Technical Data

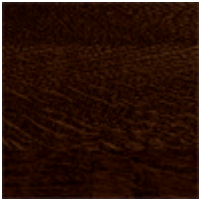

Brown



Mocha



Black



Steel



White

Without colour guarantee

Application

- The surface must be sanded properly, wood moisture content max. 12%.
- The floor must be dry and free from any old coatings, oil, grease, wax, silicone, sanding dust and other contaminants. Room temperature +15°C to +25°C, relative humidity 40% to 65%, material temperature +18°C to +25°C. Ensure working areas are adequately ventilated.
- Transfer material to a LOBATool varnish bucket before applying.
- Shake the contents well.
- The innate colour of the wood used, its structure and its pore properties, as well as the fineness of the sanding pattern, also have a major impact on the colour that can be achieved. We strongly recommend to produce a colour sample on the original wood using site-appropriate sanding techniques to check the result by yourself and if necessary for approval by the project client.
- By subsequent impregnation inequalities of the surface / parquet- and wooden floors are generally intensified. In order to achieve a uniform appearance. A careful and homogenous pre treatment is necessary.
- Observe the general and, if available, the product-specific health and safety instructions. More specific information relating to GISCODE can be found in the usage instructions, which are available at www.wingis-online.de.

Thinner

The product is supplied ready for use and must not be diluted!

Application tool/application rate

LOBATool spray pump and Wischwiesel or LOBATool roller Microfaser 100-120 as a wiper / approx. 100-120ml/m² (8-10m²/l). Buff down any wooden fibres that have arisen overnight after drying using a single-disc machine and LOBATool special pad green.

Drying time

- Dry overnight. Oil must be applied within 24 hours.

2/2018



TECHNICAL INFORMATION

PreTone VARIOUS COLOURS



Application

Suitable products for secondary impregnation:

- HS 2K IntensiveColor ^{A.T.}
- HS 2K ImpactOil Color.

Wipe-on application

- Evenly wipe on PreTone using a LOBATool Wischwiesel or roller Micro 100-120.
- Then equalise with the LOBATool Wischwiesel or roller Micro 100-120 in the direction of the grain provided the first application has already soaked completely into the wood, applying additional material if so.
- Work in sections.
- Dry overnight.
- Smooth the surface using a single-disc machine with LOBATool special pad green underneath (break up any raised wood fibres) and then remove the sanding dust.
- Within 24 hours, impregnate the surface with the preferred shade of LOBASOL[®] HS 2K ImpactOilColor or LOBADUR[®] HS 2K IntensiveColor. Process as per the product's technical information.

Spray application:

On larger areas especially, the spray application with the LOBATool spray can offers a considerable time saving while at the same time delivering an ergonomic way of working. The application with the spray device should be carried out by 2 people, since the material must be equalised immediately after spraying. On contiguous surfaces of more than 100 m², 2 or more devices must be used.

- Before starting work, immediately adjacent areas such as doors, plinths, etc., must be screened off using suitable masking tape.
- Hold the spray nozzle at a constant angle and distance from the surface as possible and spray PreTone evenly, lane by lane, at approx. 100-120 ml/m². Once one lane has been sprayed, equalise it immediately with a LOBATool Wischwiesel.
- Dry overnight.
- Smooth the surface using a single-disc machine with LOBATool special pad green underneath (break up any raised wood fibres) and then remove the sanding dust.
- Within 24 hours, impregnate the surface with the preferred shade of LOBASOL[®] HS 2K ImpactOilColor or LOBADUR[®] HS 2K IntensiveColor. Process as per the product's technical information.



TECHNICAL INFORMATION

PreTone VARIOUS COLOURS



General guidelines

Cleaning of tools: Clean tools and equipment immediately with water.

Drying time: The indicated drying times are valid for +20°C and 55% to 65% relative humidity, and assume careful, draught-free ventilation of the working area. Lower temperatures, higher relative humidity or poorer ventilation lead to longer drying times. Do not apply any protective coverings, wet clean the surface or lay carpet until the coating has achieved its final hardening. Product-specific data can be found in the relevant technical information.

Side bonding: Parquet that has not been shear-resistantly bonded in place, wood planks, wooden pavings, industrial parquet and parquet on underfloor heating as well as types of wood with a short moisture changing times (e.g. beech) show dimensional changes caused by quickly varying climate (rel. air humidity, temperature). When applying oil side bonding and thus unregular cracks in joints can not appear.

Interactions: Materials such as carpet underlays, furniture legs, castors, flexible adhesives used for parquet or for fixing can lead to softening and discolouration. Material building up in the joints can adversely affect touch and appearance. Exposure to hair dyes or rubber tyres on cars, motorcycles and cycles can lead to permanent, irreversible discolouration of the surface.

The information in this document and all other advice and recommendations that we provide to help and assist the applicator are based on previous experience and relate to Spezial conditions. Because of the wide range of possible uses and conditions of application of our products, we do not relieve users from the need to carry out their own trials or to seek technical advice by speaking to the LOBA application engineering department. Observe the floor covering manufacturer's recommendations and the provisions of the current standards. Our liabilities and responsibilities are exclusively in accordance with our Terms and Conditions and are not extended by this information or by our advice. The publishing of a new technical data sheet automatically invalidates the earlier version.

The words or symbols denoted by ® stand for trademark rights that are at least registered and protected in the territory of Germany.

